


Aurora Design Quick Start Guide

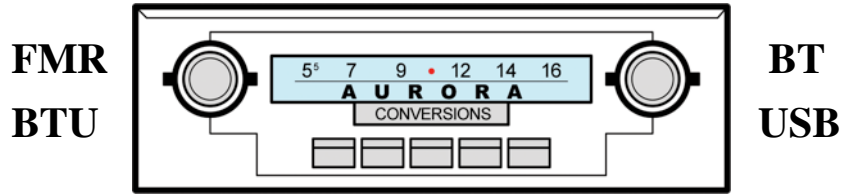

Basic Radio Control Actions

- | | | | |
|--|---------------------------|--|------------------------|
| | Virtual Fader | | Virtual Balance |
| | Loudness / EQ**
On/Off | | AVC Toggle**
On/Off |

Bluetooth/USB Control Actions

- | | | | |
|--|---------------------------------------|--|--------------------------------------|
| | Pair/Voice Command
Conference Call | | Pause/Play Music
Mute/Unmute Call |
| | Next Song
Accept Call | | Previous Song
Reject Call |
| | Next Album
(USB sequential) | | Previous Album
(USB sequential) |

Status Voice Assist Action

- In radio mode, this action will announce the frequency and optionally the channel ID for the current station. In other modes it will announce which input is currently active. (Aux/BT phone-streaming/USB)

Seek/Scan Actions (motorized tuner)

- ↓ Seek ↓↓ Scan

When in radio mode, press the Seek button once to seek to the next station. Double press the Seek button to start a scan. The radio will scan to the next station, pause and then continue until any button/action is executed.

Auto Scan Action (standard tuner)

- Start Scan Stop Scan Cancel Scan

When in radio mode, double twist the tuning knob to start a scan. (The dial pointer will not move while scanning) To stop on a station, turn the tuning knob. The station will be temporarily stored. To find the actual station on the dial, turn the tuning knob within 5 seconds of stopping the scan. When turning the dial in the correct direction, the radio will mute until the station is found.

Advanced Actions

- Signal Strength:** In radio mode, While the *Voice Assist HD* is speaking the station information, performing this action again will start a Signal Strength readout. To end, perform action again or turn radio off.
- Version:** This action will announce the firmware version of the FMR and any installed option cards.

Optional Seek Button Actions*

- | | | | |
|----|----------------------------------|-----|--------------------------------------|
| ↓ | Voice Command
Conference Call | ↓ | Pause/Play Music
Mute/Unmute Call |
| ↓ | Next Song
Accept Call | ↓↓ | Previous Song
Reject Call |
| ↓↓ | Next Album
(USB sequential*) | ↓↓↓ | Previous Album
(USB sequential*) |

- ↓ Quick press ↓ Press 1 second ↓↓ Press & hold

* On signal seeking radios, once in the Bluetooth or USB mode, the seek button (Wonderbar) can be used to control the radio. On Town & Country radios, each button can perform the actions on each side of the chart above.

** See Advanced Features Guide

Note: To perform an Action, smoothly twist the control forward and back in a continuous motion as shown by the arrows, repeating for the number of arrows shown.